


2002 Lincoln Town Car ABS removal Instructions

Module - Anti-Lock Brake Control


Removal and Installation

1. Disconnect the battery ground cable

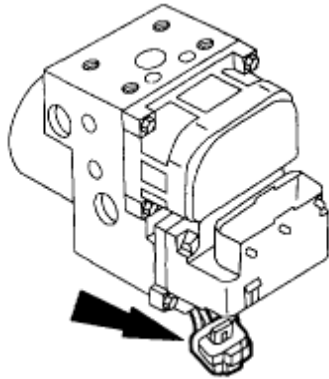

GH2555-A

2. Disconnect the anti-lock brake control module electrical connectors.
 - Disconnect the control module electrical connector.
 - Disconnect the pump motor electrical connector.

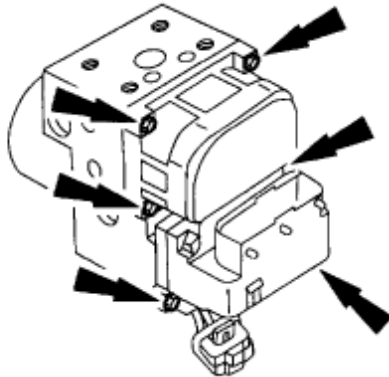

GH2556-A

3. Remove the anti-lock brake control module.
 1. Remove the screws.
 2. Remove the module.
4. **NOTE:** When the battery is disconnected and reconnected, some abnormal

4. **NOTE:** When the battery is disconnected and reconnected, some abnormal drive symptoms may occur while the vehicle relearns its adaptive strategy. The vehicle may need to be driven **16 km (10 mi)** or more to relearn its strategy. To install, reverse the removal procedure.

AUTO & TRUCK ELECTRONICS WWW.AUTOECU.COM 1-800-257-3395