


Air Conditioning Control Module

Removal

1. Open the bonnet and disconnect the battery earth lead.
2. Open the car door and remove the right hand dash liner.
3. Remove the glove box assembly.
4. Remove the screws securing the control module and displace the module from its location.
5. Disconnect the earth lead and the multi-plug harness connectors.

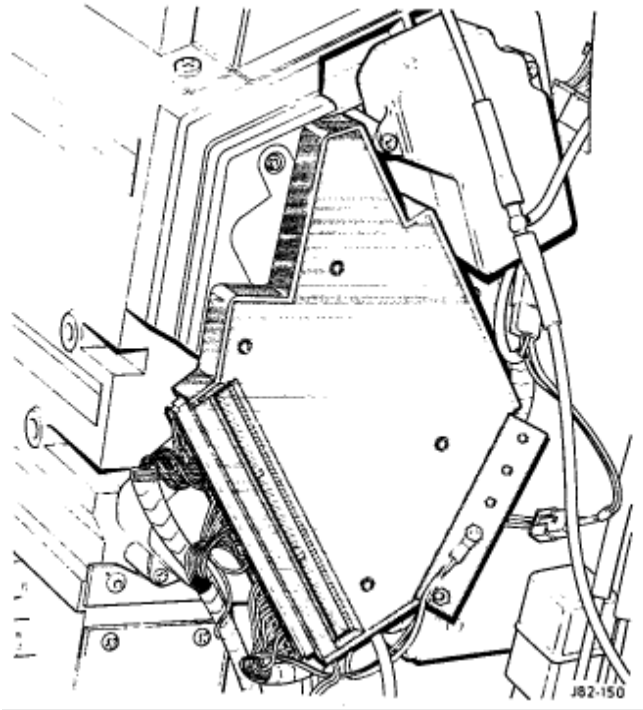

6. Remove the module. NOTE:

- Installation is the reverse of the removal procedure.
- Ensure that all connections are secure and clean.
- AUTO & TRUCK ELECTRONICS WWW.AUTOECU.COM 1-800-257-3305

