



JAGUAR XK8 ECU REMOVAL INSTRUCTIONS

Removal

1. Disconnect battery ground cable

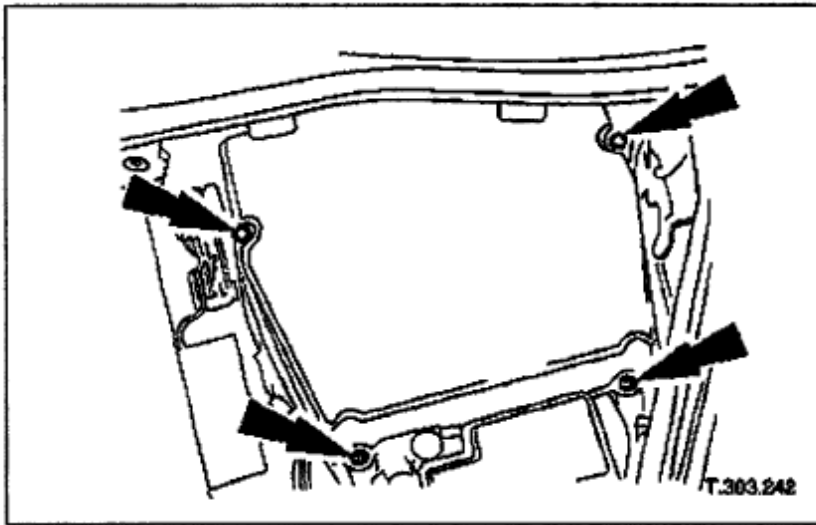

2. Remove ECM housing cover.
3. Disconnect electrical connectors.

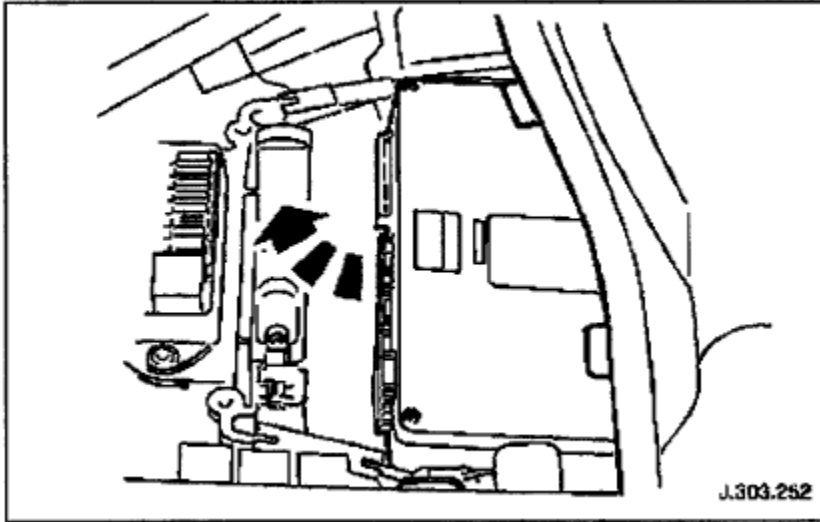

Lift ECM from housing. LOCATION RIGHT REAR ENGINE COMPARTMENT

